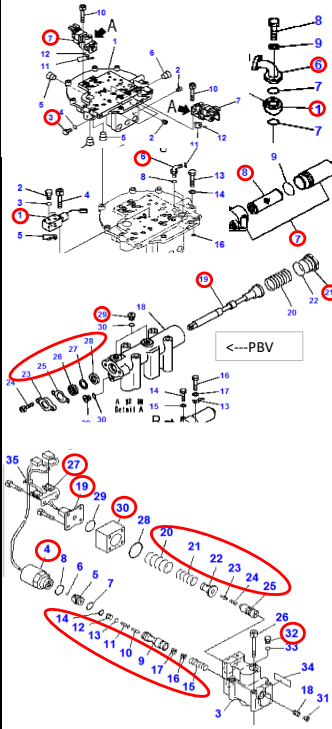


RO		PART NAME	CONTROL VALVE POWER MODULE	DOCUMENT NO	
SN		PART NUMBER		PUBLISHED DATE	
UNIT MODEL	D375-6R	START DATE / TIME		REVISION NO	
UNIT CODE		FINISH DATE / TIME		PAGE	


DISSASSY BY		DISSASSY BY	
-------------	--	-------------	--

NO.	PARTS	CONDITIONS TO BE CHECKED	CRITICAL POINT	REPAIR	SALVAGE	REPAIR	SIGN		REMARKS (SKETCH, PHOTOS, COMMENTS)											
							MECH	GL/SPV												
1	TORQ CONVERTER VALVE	- Lepas plug(10),elbow(17),sensor - Lepas cover (3,12,16,26) - Lepas spool torq converter relief v (6,7,8,9,10,11) - Lepas spool main relief valve (20,21,22,23,24,25) - Lepas housing spool Tc relief dan main relief v(2,30,31) dari TCV seat(1) ECMV STATOR & LOCK UP CLUTCH - Lepas elbow(20) - Lepas fill switch(12) dan bracket(16) ecmv stator & lockup clutch - Lepas spool detection valve(13,14) ecmv stator&lockup clutch - Lepas solenoid(2) ecmv stator&lockup clutch - Lepas spool pressure valve(7) ecmv stator&lockup clutch - Lepas housing ecmv stator(1)danlockup(5) dari TCV seat - Lepas element&plug dari filter(1,2,3) <table><tr><th colspan="3">spool pressure valve slit&without slit</th></tr><tr><td>Pressure control valve</td><td>Fill switch (Operation pressure: MPa (kg/cm²))</td><td>Operated clutches</td></tr><tr><td>Without slit</td><td>Equipped (0.26 (2.7))</td><td>Stator</td></tr><tr><td>With slit</td><td>Equipped (0.26 (2.7))</td><td>Lockup</td></tr></table> PERBEDAAN COVER TCV TC RELIEF V kondisi dudukan shim tidak terlalu di covernya polos tidak ada mark PN 711-66-16670 MAIN RELIEF V kondisi dudukan shim terlalu di covernya ada mark "19M" PN 19M-13-26670	spool pressure valve slit&without slit			Pressure control valve	Fill switch (Operation pressure: MPa (kg/cm ²))	Operated clutches	Without slit	Equipped (0.26 (2.7))	Stator	With slit	Equipped (0.26 (2.7))	Lockup	1.hati hati terhadap lentingan spring SLIT WITHOUT SLIT					gambar komponen ecmv salah tapi kurang lebih hampir sama
spool pressure valve slit&without slit																				
Pressure control valve	Fill switch (Operation pressure: MPa (kg/cm ²))	Operated clutches																		
Without slit	Equipped (0.26 (2.7))	Stator																		
With slit	Equipped (0.26 (2.7))	Lockup																		
2	LUBRICATING VALVE	- Lepas plug(2) - Lepas plug(6) - Lepas spool lubricating(4,5)	hati hati terhadap lentingan spring																	
3	TRANSMISSION ECMV VALVE	- Lepas block(4) dan sleeve(9) - Lepas block(7) - Lepas wiring harness(12) - Lepas sleeve(4) - Lepas sleeve(6) dan filter(7) - Disconnect upper dan lower housing - Lepas solenoid lower housing clutch 1,F - Lepas spool pressure valve lower housing clutch 1,F - Lepas solenoid upper housing clutch 2,3,R - Lepas spool pressure valve upper housing clutch 2,3,R - Lepas fill switch dan bracket clutch 1,2,3,R,F - Lepas Detection valve clutch 1,2,3,R,F	semua spool jangan di gabung harus di pisah dan ditandai , keterangan urutan clutch ecmv nya bisa dilihat di shop manual						SPOOL PRESSURE VALVE CLUTCH SPOOL DETECTION VALVE CLUTCH											

NO.	PARTS	CONDITIONS TO BE CHECKED	CRITICAL POINT	R E P A I R	S A L V G E	R E P A I R	SIGN		REMARKS (SKETCH, PHOTOS, COMMENTS)
							MECH	GL/SPV	
4	STEERING BRAKE VALVE	- Lepas plug(3)&elbow(6) - Lepas elbow hose(6)&danblock(1) - Lepas sudden stop prevention valve(1) - Lepas element(8)&plug dari filter(7) - Lepas filter(7) dari housing SBV PARKING BRAKE VALVE - Lepas plug(29,21) dari housing PBV - Lepas spool parking brake v(19,20) - Lepas plate(23) - Lepas gasket(25)&seal(26)dari plate(23) - Lepas collar(27)&u-packing(28) dari housing PBV(18) - Lepas PBV housing(18) dari SBV housing STEERING BRAKE ECMV Lepas semua plug(32) L R SBV ecmv Lepas fill switch(19),bracket(27),cover(30) L R Steering&brake ECMV Lepas spool detection (20,21,22,23,24,25) L R Steering&brake ECMV Lepas solenoid(4) L R steering&brake ECMV Lepas spool pressure(9,10,11,12,13,14,15,16) L R steering&brake ECMV Lepas ECMV L R dari housing	 hati hati terhadap lentingan spring SBV :steering&brake v PBV : PARKING BRAKE V  hati hati terhadap lentingan spring L R (left&right)						
		5	SOLENOID	- Lepas valve(3) dari solenoid(2) - Simpan ball(4)	 gunakan special tools & ball jangan sampai hilang				
DISASSY BY				APPROVED BY					
MEKANIK				GL/SPV					

CHECKSHEET ASSEMBLY CONTROL VALVE D375-6

RO		PART NAME	CONTROL VALVE P MODULE	DOCUMENT NO	
SN		PART NUMBER		PUBLISHED DATE	
UNIT MODEL	D375-6R	START DATE / TIME		REVISION NO	
UNIT CODE		FINISH DATE / TIME		PAGE	

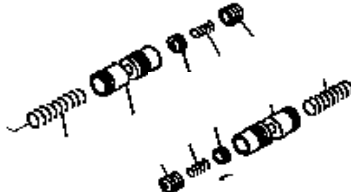
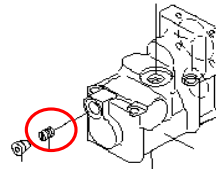
ASSEMBLY BY		ASSEMBLY BY																			
NO.	PARTS	CONDITIONS TO BE CHECKED	CRITICAL POINT	SPECS	SIGN MECH GL/SPV	REMARKS (SKETCH, PHOTOS, COMMENTS)															
1	SOLENOID	- Pasang ball(4) ke valve(3) - Pasang valve(3) ke solenoid(2) Actual : Kgm	 gunakan special tools																		
2	TORQ CONVERTER VALVE	- Pasang plug(10), elbow(17), sensor - Pasang gasket(20) - Pasang main relief housing(2) ke tcv seat(1) Actual : Kgm PERBEDAAN COVER TCV <table><thead><tr><th>TC RELIEF V</th><th>MAIN RELIEF V</th></tr></thead><tbody><tr><td>kondisi dudukan shim tidak terlalu</td><td>kondisi dudukan shim terlalu</td></tr><tr><td>di covernya polos tidak ada mark</td><td>di covernya ada mark "19M"</td></tr><tr><td>PN 711-66-16670</td><td>PN 19M-13-26670</td></tr></tbody></table> ECMV STATOR & LOCK UP CLUTCH - Pasang elbow(20) - Pasang spool pressure valve(7) ecmv stator&lockup clutch - Pasang solenoid(2) ecmv stator&lockup clutch - Pasang spool detection valve(13,14) ecmv stator&lockup clutch - Pasang fill switch(12) dan bracket(16) ecmv stator & lockup clutch Actual : Kgm - Pasang socket conector fill switch dan solenoid ke bracket - Pasang ecmv stator&lockup clutch assy ke TCV seat Actual : Kgm - Pasang element(2) ke filter(1) - Tutup menggunakan tutup filter dan kencangkan - Pasang plug ke filter <table><thead><tr><th>Pressure control valve</th><th>Fill switch (Operation pressure: MPa (kg/cm²))</th><th>Operated clutches</th></tr></thead><tbody><tr><td>Without slit</td><td>Equipped (0.26 (2.7))</td><td>Stator</td></tr><tr><td>With slit</td><td>Equipped (0.26 (2.7))</td><td>Lockup</td></tr></tbody></table>	TC RELIEF V	MAIN RELIEF V	kondisi dudukan shim tidak terlalu	kondisi dudukan shim terlalu	di covernya polos tidak ada mark	di covernya ada mark "19M"	PN 711-66-16670	PN 19M-13-26670	Pressure control valve	Fill switch (Operation pressure: MPa (kg/cm ²))	Operated clutches	Without slit	Equipped (0.26 (2.7))	Stator	With slit	Equipped (0.26 (2.7))	Lockup	 1. hati hati spring cukup kuat&berat 2. shim sesuaikan partbook saja 3. hati hati ada perbedaan di cover relief tc dan main relief v jangan sampai tertukar	5 kgm 7 kgm <
TC RELIEF V	MAIN RELIEF V																				
kondisi dudukan shim tidak terlalu	kondisi dudukan shim terlalu																				
di covernya polos tidak ada mark	di covernya ada mark "19M"																				
PN 711-66-16670	PN 19M-13-26670																				
Pressure control valve	Fill switch (Operation pressure: MPa (kg/cm ²))	Operated clutches																			
Without slit	Equipped (0.26 (2.7))	Stator																			
With slit	Equipped (0.26 (2.7))	Lockup																			

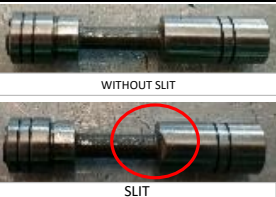
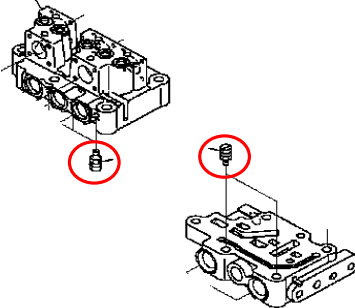
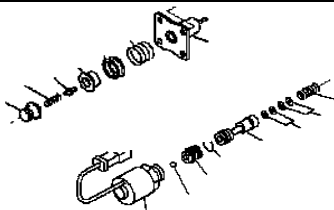
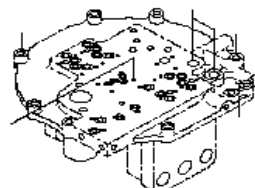
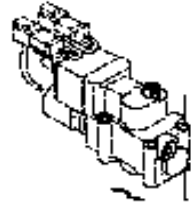
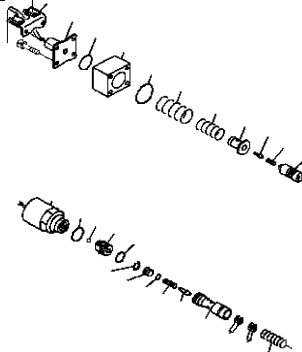
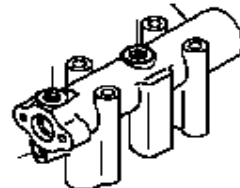
NO.	PARTS	CONDITIONS TO BE CHECKED	CRITICAL POINT	SPECS	SIGN		REMARKS (SKETCH, PHOTOS, COMMENTS)
					MECH	GL/SPV	
4	TRANSMISSION ECMV VALVE	• Pasang spool pressure v clutch 1,F ke lower housing • Pasang solenoid clutch 1,F ke lower housing • Pasang spool pressure v clutch 3,R,2 ke upper housing • Pasang solenoid clutch 3,R,2 ke upper housing • Pasang spool detection v clutch 1,3,R,2,F ke upper housing • Pasang fill switch dan bracket ke upper housing Actual : Kgm	1.pemasangan connector fill switch dan solenoid ke bracket serta pemasangan socket fill switch dan solenoid ke wiring harness harap lihat shop manual supaya tidak salah 2.shim detection v semua clutch : 1tebal,1tipis 3.shim pressure v clutch 1 : 1 tebal,1 tipis 4. shim pressure v clutch selain 1 : 2 tebal 1 tipis	0,5 kgm		● SPOOL PRESSURE VALVE CLUTCH ● SPOOL DETECTION VALVE CLUTCH	
		• Pasang gasket ke lower housing • Connect upper housing ke lower housing Actual : Kgm		5 kgm			
		• Pasang connector fill switch dan solenoid ke bracket • Pasang filter(7)dan sleeve(6) ke upper housing • Pasang sleeve(4)ke upper housing • Pasang harness dan conectkan ke socket fill switch&solenoid • Pasang block(7) ke lower housing Actual : Kgm		5 kgm			
		• Pasang block(4)&sleeve(9) ke lower housing Actual : Kgm					
5	STEERING BRAKE VALVE	• Pasang plug(3)&elbow(6) • Pasang elbow hose(6)dan block(1) • Pasang sudden stop prevention v(1) Actual : Kgm	hati hati spring kuat dan berat SBV : steering&brake v PBV : PARKING BRAKE V hati hati spring kuat&berat L R (left&right)	1 kgm			
		• Pasang element(8)&plug ke filter(7) • Pasang filter(7) ke housing SBV Actual : Kgm		7 kgm			
		PARKING BRAKE VALVE • Pasang seal(26)ke plate(23) • Pasang collar(27)&u-packing(28) ke housing PBV(18) • Pasang spool PBV(13,20,21) • Pasang plug(29) • Pasang PBV assy ke SBV housing Actual : Kgm		3-5 kgm			
		STEERING BRAKE ECMV • Pasang semua plug(32) L R SBV ecmv • Pasang spool pressure v (9,10,11,12,13,14,15,16) L R steering&brake ECMV • Pasang solenoid(4) L R steering&brake ECMV • Pasang spool detection (20,21,22,23,24,25) L R Steering&brake ECMV • Pasang fill switch(19),bracket(27),cover(30) L R Steering&brake ECMV Actual : Kgm		0,5 kgm			
		• Pasang socket fill swith dan solenoid ke bracket(27) • Pasang ECMV steering&brake L,R ke housing SBV Actual : Kgm		1 kgm			
ASSEMBLY BY				APPROVED BY			
MEKANIK				GL/SPV			

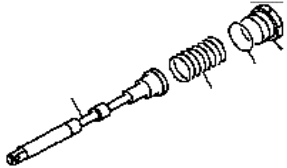
CHECKSHEET INSPECTION CONTROL VALVE D375A-6R

RO		PART NAME	CONTROL VALVE T/M	DOCUMENT NO	
SN		PART NUMBER		PUBLISHED DATE	
UNIT MODEL	D375A-6R	START DATE / TIME		REVISION NO	
UNIT CODE		FINISH DATE / TIME		PAGE	

INSPECTION BY		INSPECTION BY	
---------------	--	---------------	--

NO	PARTS NAME	METHODE	CHECK POINT & EVALUATION	DECISION			REMARKS (SKETCH, PHOTOS, COMMENTS)																								
				U/A	U/R	R/N																									
1	HOUSING LUBRICATING VALVE	VISUAL CHECK	Check hole&surface housing lubricating valve <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
2	SPOOL LUBRICATING VALVE	VISUAL CHECK	Check hole dan surface spool Lubricating valve <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>BEND</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			BEND			CORROSION						
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
BEND																															
CORROSION																															
3	HOUSING TORQ CONVERTER VALVE	VISUAL CHECK	Check hole&surface housing Torq converter valve <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
4	SPOOL MAIN RELIEF & TORQ CONVERTER RELIEF VALVE	VISUAL CHECK	Check hole&surface spool main relief&TC relief valve <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
5	SEAT TORQ CONVERTER VALVE	VISUAL CHECK	Check surface TC valve seat <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
6	HOUSING ECMV STATOR&LOCKUP CLUTCH	VISUAL CHECK	Check hole dan surface housing ECMV serta bersihkan oriface menggunakan cleaner <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
7	SPOOL STATOR&LOCKUP CLUTCH	VISUAL CHECK	Check hole dan surface spool ECMV <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>BEND</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			BEND			CORROSION						
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
BEND																															
CORROSION																															

NO	PARTS NAME	METHODE	CHECK POINT & EVALUATION	DECISION			REMARKS (SKETCH, PHOTOS, COMMENTS)																								
				U/A	U/R	R/N																									
8	SPOOL ECMV PRESSURE VALVE	VISUAL CHECK	Check dan pastikan spool ecmv pressure valve tersebut sesuai slit dan without slit nya jangan di tempatkan di clutch yang salah <table><tr><td>CLUTCH</td><td>WITHOUT SLIT</td><td>SLIT</td></tr><tr><td>STATOR</td><td>V</td><td></td></tr><tr><td>LOCK-UP</td><td></td><td>V</td></tr></table>	CLUTCH	WITHOUT SLIT	SLIT	STATOR	V		LOCK-UP		V																			
CLUTCH	WITHOUT SLIT	SLIT																													
STATOR	V																														
LOCK-UP		V																													
9	HOUSING TRANSMISSION EMCV VALVE	VISUAL CHECK	Check hole dan surface housing ECMV transmission valve serta bersihkan oriface menggunakan cleaner <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
10	SPOOL TRANSMISSION EMCV VALVE	VISUAL CHECK	Check hole dan surface spool Transmison ecmv valve <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>BEND</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			BEND			CORROSION						
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
BEND																															
CORROSION																															
11	HOUSING STEERING BRAKE VALVE	VISUAL CHECK	Check hole&surface housing steering brake valve <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
12	HOUSING ECMV STEERING&BRAKE VALVE	VISUAL CHECK	Check hole dan surface housing ECMV serta bersihkan oriface menggunakan cleaner <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															
13	SPOOL STEERING&BRAKE VALVE	VISUAL CHECK	Check hole dan surface spool steering brake valve <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>BEND</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			BEND			CORROSION						
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
BEND																															
CORROSION																															
14	HOUSING INCHING	VISUAL CHECK	Check hole&surface housing inching <table><tr><td>CHECK</td><td>HOLE</td><td>SURFACE</td></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			CORROSION									
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
CORROSION																															

NO	PARTS NAME	METHODE	CHECK POINT & EVALUATION	DECISION			REMARKS (SKETCH, PHOTOS, COMMENTS)																								
				U/A	U/R	R/N																									
15	SPOOL INCHING	VISUAL CHECK	Check surface spool inching <table><tr><th>CHECK</th><th>HOLE</th><th>SURFACE</th></tr><tr><td>NORMAL</td><td></td><td></td></tr><tr><td>PITTING</td><td></td><td></td></tr><tr><td>CHIPPING</td><td></td><td></td></tr><tr><td>WEAR</td><td></td><td></td></tr><tr><td>SCRATCH</td><td></td><td></td></tr><tr><td>BEND</td><td></td><td></td></tr><tr><td>CORROSION</td><td></td><td></td></tr></table>	CHECK	HOLE	SURFACE	NORMAL			PITTING			CHIPPING			WEAR			SCRATCH			BEND			CORROSION						
CHECK	HOLE	SURFACE																													
NORMAL																															
PITTING																															
CHIPPING																															
WEAR																															
SCRATCH																															
BEND																															
CORROSION																															
INSPECT BY				APPROVED BY																											
MEKANIK				GL/SPV																											